


Water Sampling

Step 1

Use a water sample bottle with attached form provided by the Health Department or Public Health Lab

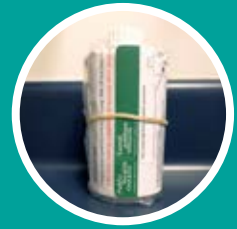

Step 2

Remove all attachments from the faucet including the aerator, rubber washer and any hoses



Step 3

Make sure to disinfect the tap with alcohol or plain bleach (5.25% sodium hypochlorite)



Step 4

Run cold water tap for a minimum of 5 minutes



Step 5

Unscrew cap from water sample bottle



Be sure not to contaminate the inside of the cap or the neck of the sample bottle with your fingers



**Step
6**

Fill bottle to 200ml water line indicated on bottle



**Step
7**

Screw cap on tightly



**Step
8**

Complete form that is provided with water sample bottle

Remember to record the PIN in order to gain access to your results over the phone



**Step
9**

Place filled bottle into an insulated cooler with ice pack and transport to the nearest drop off location

